28 January, 2015, www.brodit.com, © 2015 Brodit AB

Product 854913

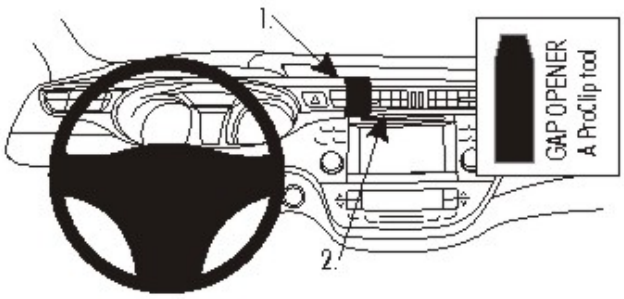

854913 ProClip

Center mount. NOT for the hybrid models.

The ProClip is a mounting bracket for the vehicle's dashboard. Onto the ProClip you can install e.g. a holder for your mobile phone or PDA or a handsfree set etc. Safe and convenient -always within easy reach. The ProClip is car specific and easy to install. The installation is quick, no special tools or dismantle of the dashboard is required and it will not damage the interior of the vehicle. Made in black ABS plastic. Comes with detailed instructions.

EAN: 7320288549132

Item no 854913 fits:
Toyota Avalon 13-15 (For USA)

INSTALLATION INSTRUCTIONS

1.

2.

3.

4.

Please read the instructions and look at the pictures before installing the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape cover on the ProClip. Press the thin end of the enclosed gap opener into the gap between the upper console ledge and the top part of the dashboard, to widen the gap. Hook the left part of the angled edge on the upper part of the ProClip into the gap next to the gap opener. Pull out the gap opener.

2. Press the thin end of the gap opener into the gap to the right of the ProClip. Hook the right part of the angled edge into the gap next to the gap opener. Pull out the gap opener.

3. Place your index fingers behind the lower part of the ProClip and pull down so the ProClip flexes downward, and then hook the lower angled edge into the gap under the panel overhand. Push forward on the lower part of the ProClip to make sure it is all the way into the gap. Use the gap opener fo help if needed.

4. The ProClip is in place.